

STL-11HPv2 PoE Single Port Injector User Manual

Package Content

- PoE Injector 1PC
- AC Power Cable 1PC
- User Manual 1PC



Installation Steps

1. Connect AC Power cord to PoE injector, and "Power" LED will be on.
2. Connect Data/in port of Injector to LAN switch via Ethernet cable.
3. The Ethernet cable connects with the LAN port of the remote networking device which is with PoE PD embedded or PoE splitter as diagram below.

